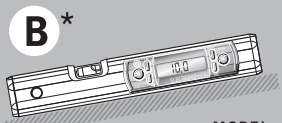
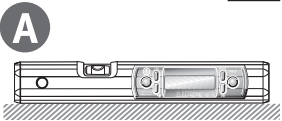


STABILA

B *
MODE*
0

1X | MODE ▲ 10.0 ▼

1X | MODE ▲ 17.7 % ▼

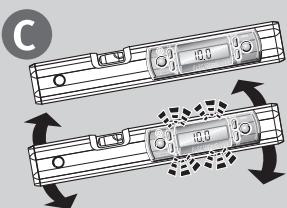
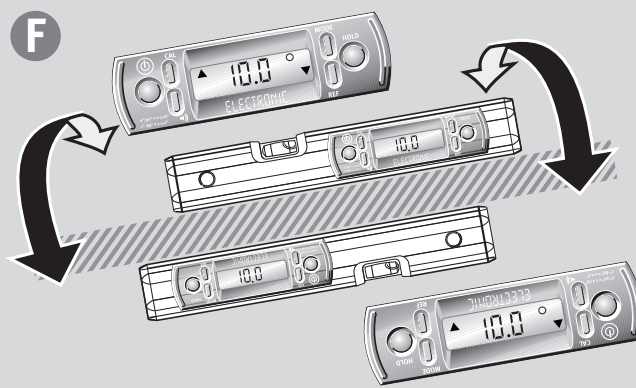
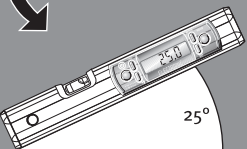
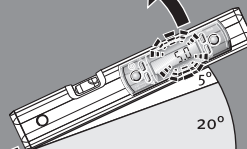
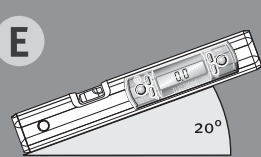
2X | MODE ▲ 177 mm/m ▼

3X | MODE ▲ 2.12 IN/FT ▼

4X | MODE ▲ 2.18 IN/FT ▼

10.00°

i

**D** *

1X | REF ▲ 20.0 ▼ 20°

▲ 0.0 ▼ 0° (=20°)

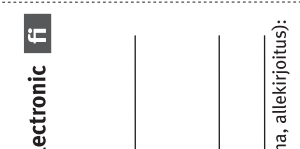
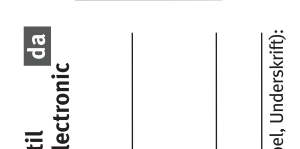
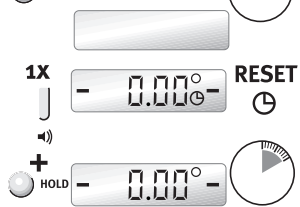
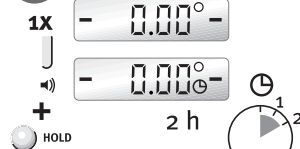
▲ 0.0 ▼

▲ 5.0 ▼ +5° (≅25°)

1X | REF ▲ 20.0 ▼ 20° (+5°)

≅ 3 sec

1X | REF ▲ 25.0 ▼ RESET REFERENCE

G ***STABILA****80 A electronic**

- de** Bedienungsanleitung
- en** Operating Instructions
- fr** Mode d'emploi
- it** Istruzioni per l'uso
- es** Instrucciones
- nl** Bedieningshandleiding
- pt** Manual de instruções
- no** Bruksanvisning
- fi** Käyttöohje
- da** Betjeningsvejledning
- sv** Bruksanvisning
- tr** Kullanma kılavuzu
- cs** Návod k použití
- sk** Návod na obsluhu
- pl** Instrukcja obsługi
- sl** Navodila za uporabo
- hr** Upute za rukovanje
- hu** Használati utasítás
- ro** Instrucțiuni de folosire
- el** Οδηγίες χειρισμού
- ru** Инструкция по обслуживанию
- lv** Lietošanas instrukcija
- et** Kasutusjuhend
- lt** Naudojimo instrukcija
- ja** 取扱説明書
- ko** 사용 설명서
- zh** 操作说明书

de
Garantieschein für
STABILA 80 electronic
Kunde:
Adresse:
Kaufdatum:
Händler (Stempel, Unterschrift):

en
Guarantee form for
STABILA 80 electronic
Customer:
Address:
Purchase date:
Dealer (stamp, signature):

it
Certificato di garanzia
per il **STABILA 80 electronic**
Cliente:
Indirizzo:
Data di acquisto:
Rivenditore (timbro, firma):

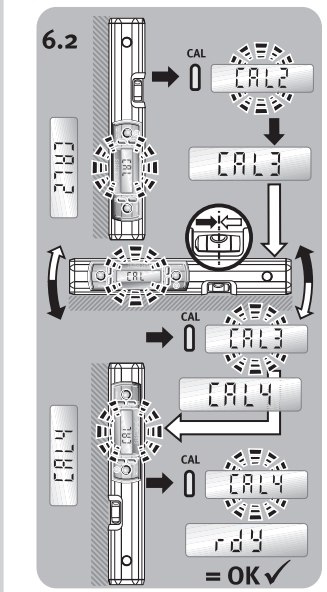
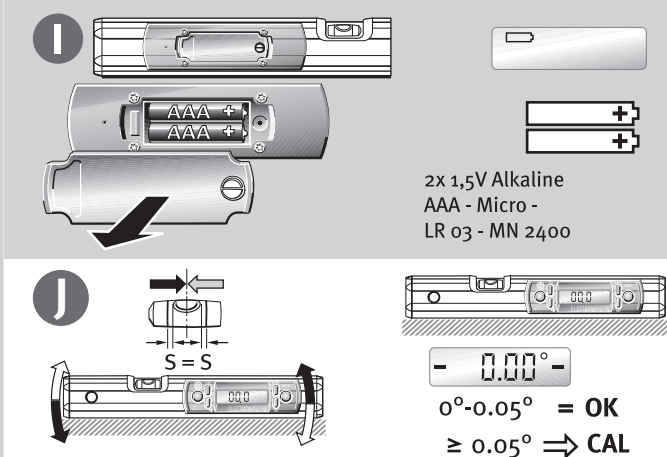
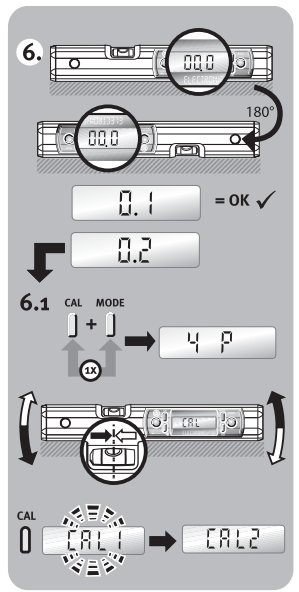
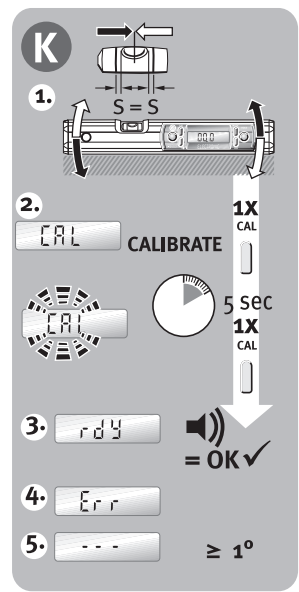
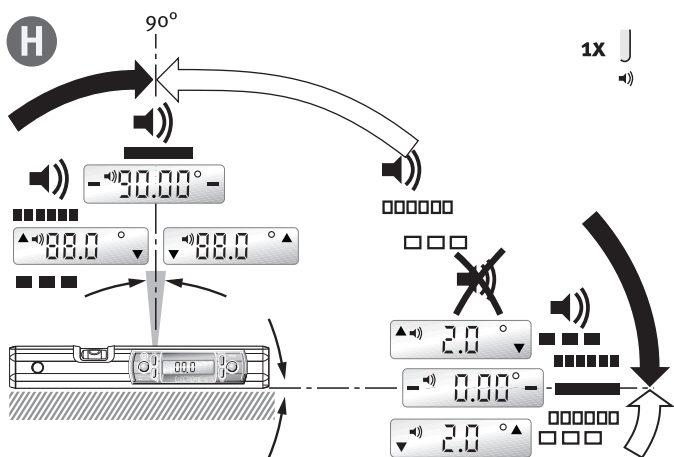
fr
Bon de garantie pour
STABILA 80 electronic
Client:
Adresse:
Date d'achat:
Concessionnaire (cachet, signature):

es
Certificado de garantía
para el **80 electronic de STABILA**
Cliente:
Dirección:
Fecha de compra:
Comerciante (sello y firma):

nl
Garantiebewijs voor
STABILA 80 electronic
Klant:
Adres:
Koopdatum:
Leverancier (stempel, handtekening):

da
Garantibevís til
STABILA 80 electronic
Kunde:
Adresse:
Købsdato:
Forhandler (stempel, Underskrift):

fi
STABILA 80 electronic
takuutodistus
Asiakas:
Osoite:
Ostopäivämäärä:
Jälleenmyyjä (leima, allekirjoitus):



STABILA Messgeräte
Gustav Ullrich GmbH

P.O. Box 13 40 / D-76851 Annweiler
Landauer Str.45 / D-76855 Annweiler

☎ + 49 63 46 309 - 0
☎ + 49 63 46 309 - 480
✉ info@stabila.de
🌐 www.stabila.com

STABILA Tech 80 DL
İçin garanti belgesi
Müşteri:
Adres:
Satın alın tarihi:
Yetkili bayi (kafe, imza):

Záručný list pro STABILA Tech 80 DL
Zákazník:
Adresa:
Datum prodeje:
Prodávce (razítko, podpis):

STABILA Tech 80 DL
Karta gwarancyjna dla
Klient:
Adres:
Data zakupu:
Sprzedawca (stempel, podpis):

STABILA Tech 80 DL
Zákazník
Adresa:
Datum kúpy:
Predajca (peiatka, podpis):

STABILA Tech 80 DL
Garancijski list
Stanika:
Naslov:
Datum nakupa:
Trgovac (zig, podpis):






STABILA Tech 80 DL
Garancialevél a
Vevő:
Lakcím:
Vásárlás ideje:
Kereskedő (bélyegző, aláírás):



STABILA Tech 80 DL
Гарантийный бланк
Заказчик:
Адрес:
Дата покупки:
Продавец (штамп, подпись):


STABILA Tech 80 DL
Beneficiarul:
Adresa:
Data cumpărării:
Dealerul (ștampila, semnatura):

- A** ON / OFF with automatic autotest of the display
- * **B** Selection of operating mode = selection of measurement unit
- i** In IN/FT in partial display mode: maximum accuracy of display = 1/8" ~ 0,5°
- C** Measured value memory = holding of current value
- D** ON / OFF acoustic signal
- E** New measurement reference = zero point freely selectable as reference

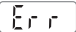

- 
- MODE**
- HOLD**
- 
- REF**

- F** Automatic inversion of the display during overhead measurement
 - * **G** Setting the switch off time
 Factory setting: 10 min 
 Optional: 2 h 
 - H** Visual / audible alignment aid  
 - I** Replacing the batteries
-  **Tip:** Remove the batteries if the unit will not be used for a long period !

- * **J** Accuracy test
 - Every time before starting work
 - Horizontal alignment using the vial
 - Recalibration if differences > 0.05°
- 

- * The setting selected remains in memory after the unit is switched off.

- * **K** Calibration **CAL**
 1. Horizontal alignment using the vial **en**
 2. Automatic calibration
 3. End of calibration  = OK

Error messages:

 4.  = Vibration during calibration --> Switch the unit on again
 5.  = Angle > 1° from factory setting --> Begin again with 1
 6. Checking the calibration
 - 6.1 Adjustment
 - 6.2 Spirit levels without vertical vials must be placed against a vertical surface e.g. a door-frame.

Guarantee terms and conditions


Stabila provides a guarantee against deficiencies and faults in the assured characteristics because of material or manufacturing faults for a period of 24 months from date of purchase. Any faults will be eliminated at Stabila's own discretion either by repairing or replacing the unit. Stabila accepts no wider claims. No liability is accepted for any faults due to inappropriate treatment (e.g. damage caused by the unit falling, operation with the wrong voltage or type of current, use of unsuitable current supply sources) or for any autonomous changes made to the unit by the purchaser or a third party. Also no claims under guarantee are accepted for natural wear and tear or any small faults that do not significantly affect the unit's operation. Any guarantee claims must be made via the dealer on the duly completed guarantee form to be returned with the unit.

Operating instructions

We have endeavoured to explain the unit's handling and functioning in as clear and comprehensible manner as possible. If, however, you still have any unanswered questions, we should be pleased to provide advice over the telephone at any time on the following telephone number: +49 6346 309-0

Recycling programme for our EU customers:

In accordance with the WEEE regulations, STABILA provides a disposal programme for electronic products at the end of their service life. For more details, please contact: +49 6346 309-0



Technical data:

Measurement accuracy:		
Electronic module	0° + 90°:	0,05°
	1°...89°:	0,2°
Spirit level:		
In normal position:	0,5 mm/m = 0,029°	
Overhead measurement:	0,75 mm/m = 0,043°	
Operating voltage:	1,5V	
Batteries:	2x AAA, Micro,LR03, MN2400	
Operating life:	40 hours	
Operating temperature range:	-10 °C to +50°C (14 °F to 122°F)	
Storage temperature range:	-20 °C to +65°C (-4°F to 149°F)	
Subject to technical modifications.		





- de** Ergänzung zur Garantieerklärung: Die Garantie gilt weltweit.
- en** Addition to warranty declaration: The warranty applies world-wide.
- fr** Complément à la déclaration de garantie : La garantie est valable dans le monde entier.
- it** Aggiunta alla dichiarazione di garanzia: La garanzia ha validità mondiale.
- es** Ampliación de la declaración de garantía: La garantía tiene validez en todo el mundo.
- nl** Aanvulling op de garantieverklaring: De garantie is wereldwijd geldig.
- pt** Acrescento da declaração de garantia: A garantia é válida em todo o mundo.
- no** Supplement til garantierklæringen: Garantien gjelder i hele verden.
- fi** Takuuilmoituksen täydennys: Takuu on voimassa maailmanlaajuisesti.
- da** Supplement til garantierklæring: Garantien gælder internationalt.
- sv** Komplettering till garantiförklaring: Garantien gäller i hela världen.
- tr** Garanti beyanına ek: Garanti, dünya genelinde geçerlidir.
- cs** Doplnění k prohlášení o záruce: Tato záruka platí po celém světě.
- sk** Doplnok k vyhláseniu o záruke: Táto záruka platí celosvetovo.
- pl** Uzupełnienie oświadczenia gwarancyjnego: Gwarancja obowiązuje na całym świecie.
- sl** Dopolnitev garancijske izjave: Garancija velja po vsem svetu.
- hu** A garancianyilatkozat kiegészítése: A garancia világszerte érvényes.
- ro** Supliment la declarația de garanție: Garanția se aplică la nivel mondial.
- ru** Дополнение к гарантийному заявлению: Гарантия действует по всему миру.
- lv** Garantijas saistību papildinājums: Šī garantija ir spēkā visā pasaule.
- et** Garantii lisa: See garantii kehtib kogu maailmas.
- lt** Garantijos papildymas: Garantija galioja visame pasaulyje.
- ko** 보장 진술 추가: 이 보증서는 전 세계에서 적용됩니다.
- zh** 质保声明的补充信息: 该质保全球适用。